


HOME DECORATORS COLLECTION












INV# 23116
SK17954Er1-a AVERY SINGLE BIN MOBILE CART 28"Hx13"Wx12"D
ASSEMBLY INSTRUCTIONS

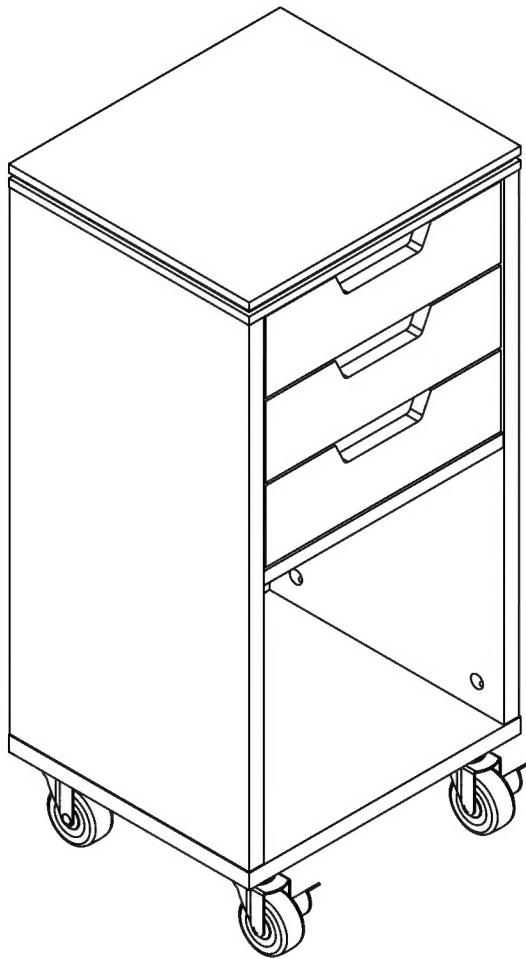







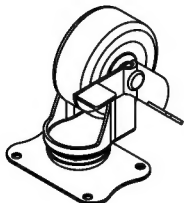

Made In China

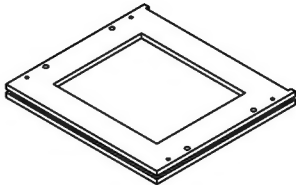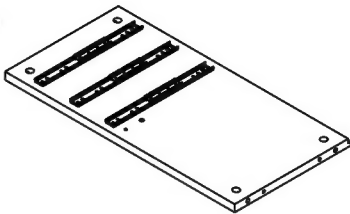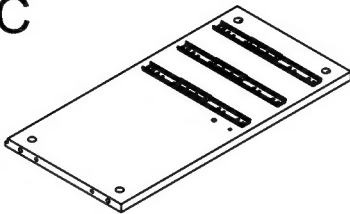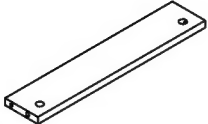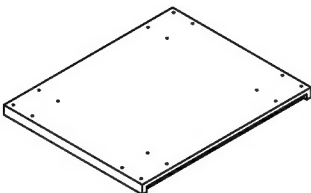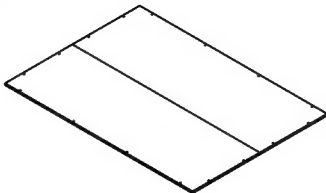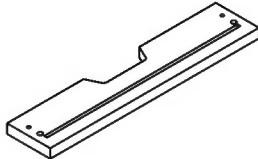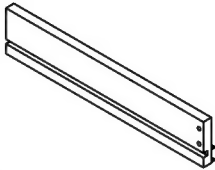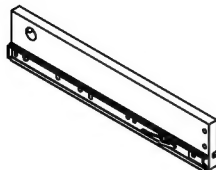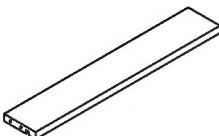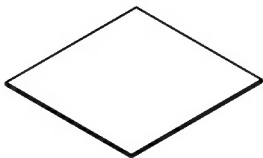

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, please contact our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.


IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST		
A  TOP PANEL-1PC	B  LEFT SIDE PANEL-1PC	C  RIGHT SIDE PANEL-1PC
D  FRONT FIXED PANEL-1PC	E  BOTTOM PANEL-1PC	F  BACK PANEL-1PC
G  DRAWER FRONT PANEL-3PCS	H  DRAWER LEFT SIDE PANEL-3PCS	I  DRAWER RIGHT SIDE PANEL-3PCS
J  DRAWER BACK PANEL-3PCS	K  DRAWER BOTTOM PANEL-3PCS	

<p>a</p>  <p>WOOD DOWEL-16PCS</p>	<p>b</p>  <p>CAM LOCK BOLT-16PCS</p>	<p>c</p>  <p>CAM LOCK-16PCS</p>
<p>d</p>  <p>LONG PLASTIC COVER-4PCS</p>	<p>f</p>  <p>SHORT PLASTIC COVER-6PCS</p>	<p>g</p>  <p>ROUND HEAD SCREW-16PCS</p>
<p>h</p>  <p>1" FLAT HEAD SCREW-12PCS</p>	<p>i</p>  <p>5/8" FLAT HEAD SCREW-16PCS</p>	<p>j</p>  <p>UNIVERSAL WHEEL(1)-2PCS</p>
<p>k</p>  <p>UNIVERSAL WHEEL(2)-2PCS</p>		



NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE

HOW TO SEPARATE GLIDES

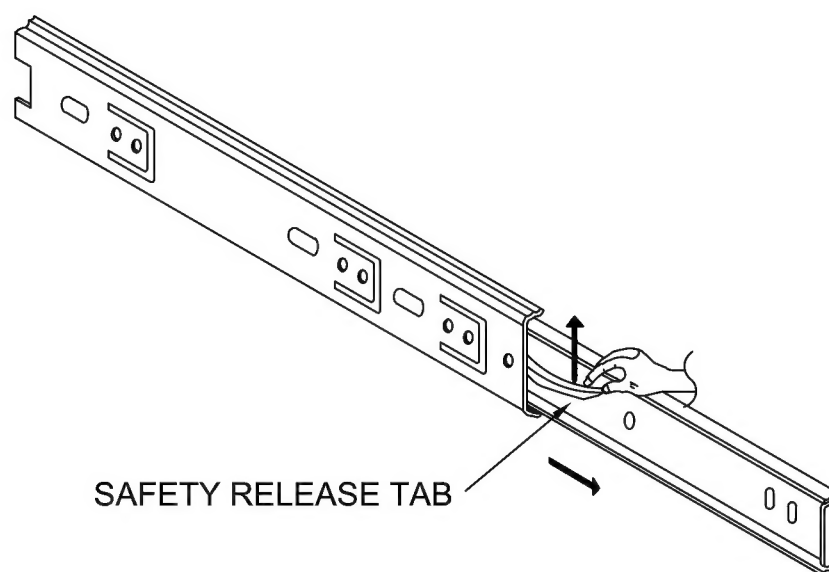



PRIOR TO ASSEMBLY, WE SUGGEST SEPARATING THE INNER GLIDES FROM THE OUTER-GLIDES, SIMPLY PULL THE LEFT/RIGHT INNER GLIDES FROM THE OUTER GLIDES EXPOSING A SMALL BLACK SAFETY RELEASE TAB, BY PUSHING THE SAFETY RELEASE TAB. YOU WILL BE ABLE TO SEPARATE THE GLIDES.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO THE FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY. PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

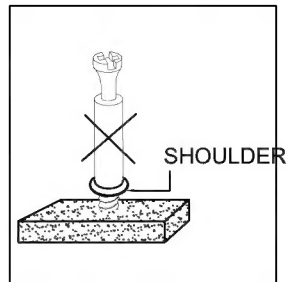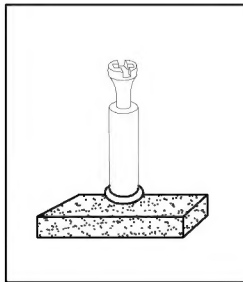


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

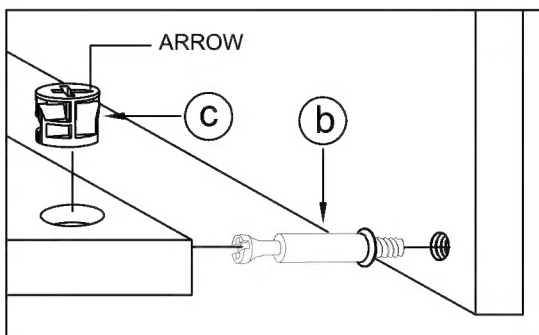


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS.

FIG 1

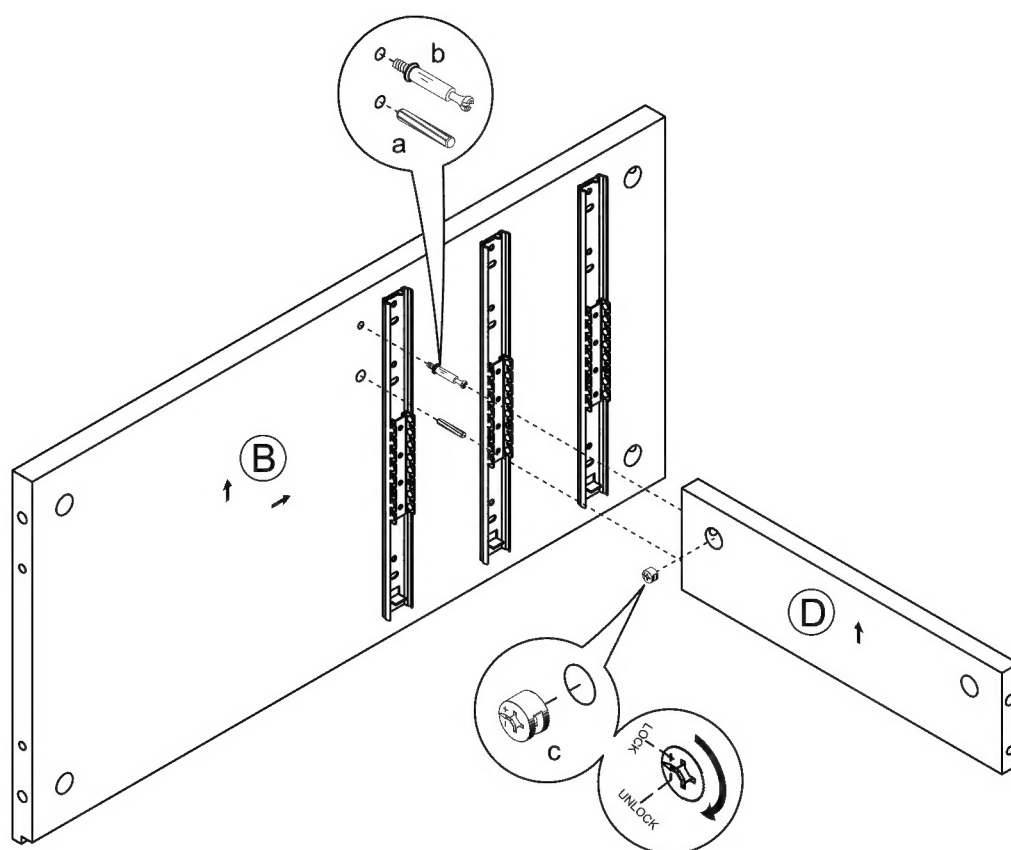


- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE LEFT SIDE PANEL (B).
- JOIN THE FRONT FIXED PANEL (D) TO THE LEFT SIDE PANEL (B)
BY USING WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) WITH THE CAM LOCK (c) FROM PRE-DRILLED HOLES.

FIG 2

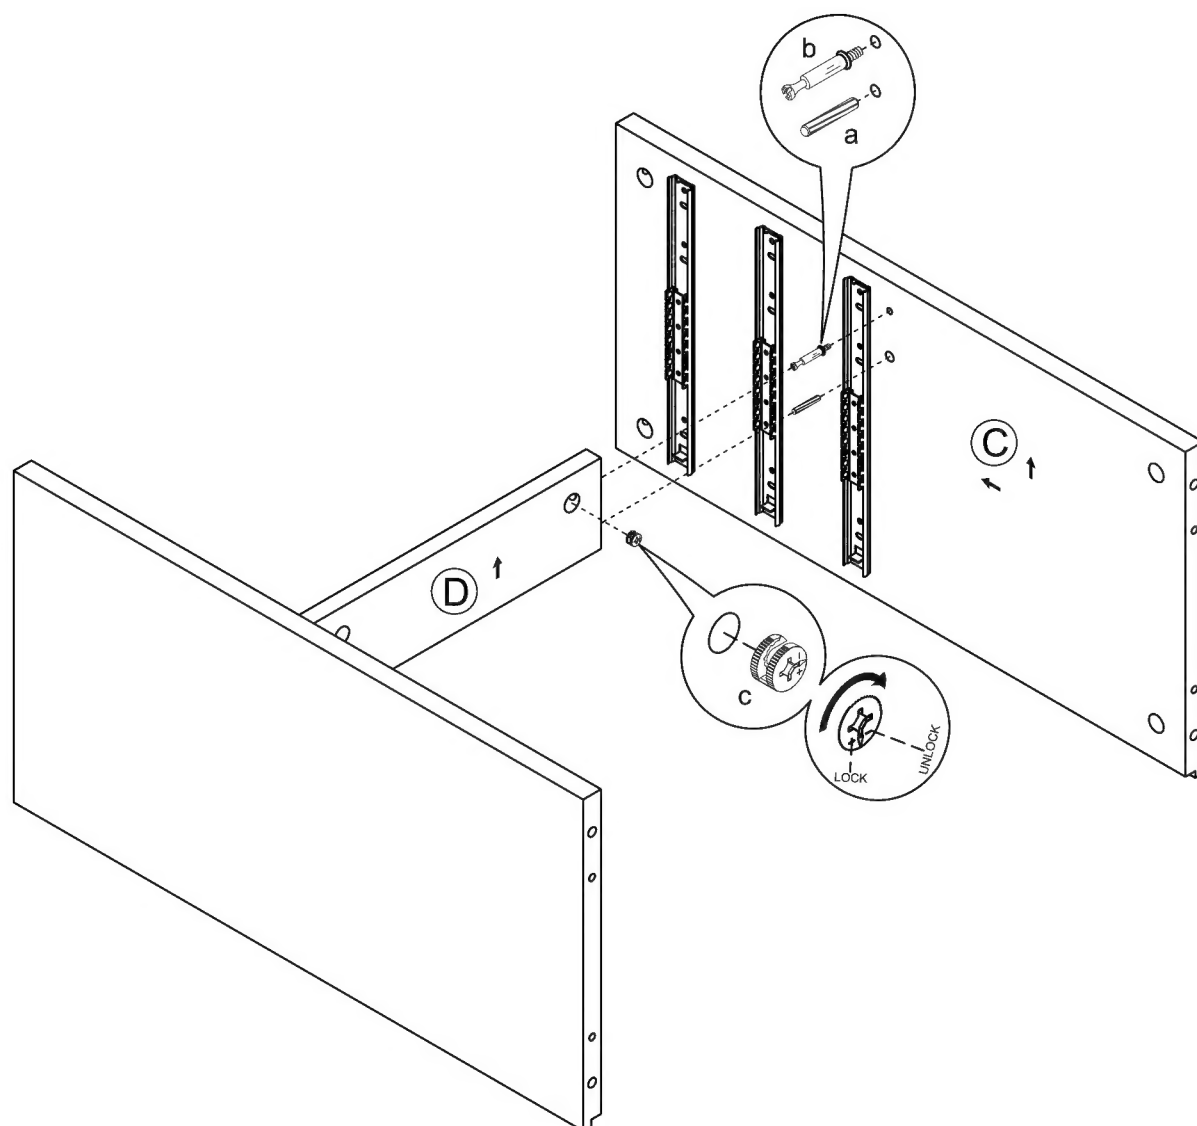


- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE RIGHT SIDE PANEL (C).
- JOIN THE FRONT FIXED PANEL (D) TO THE RIGHT SIDE PANEL (C) BY USING WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) WITH THE CAM LOCK (c) FROM PRE-DRILLED HOLES.

FIG 3

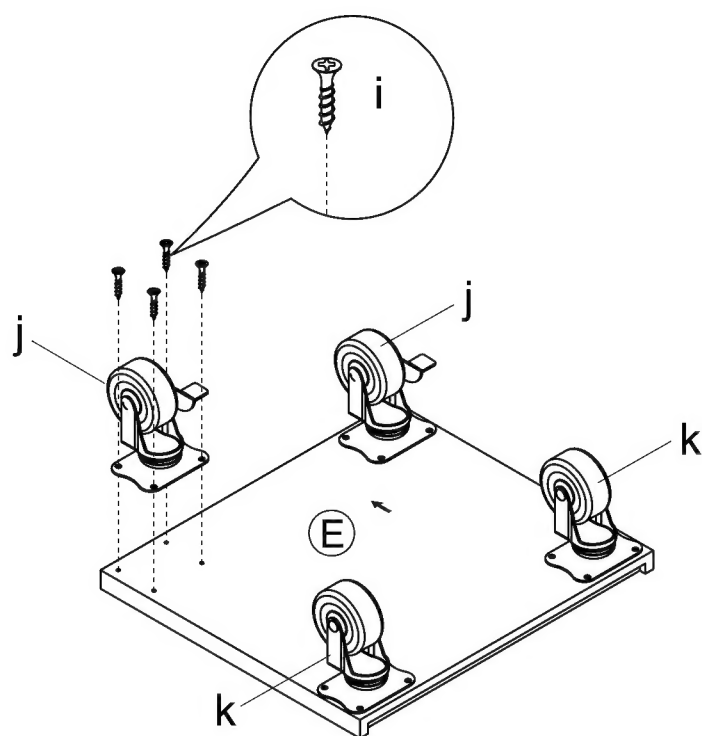


- JOIN THE UNIVERSAL WHEEL (j & k) TO THE BOTTOM PANEL (E)
BY USING 5/8" FLAT HEAD SCREW (i) FIRST.

FIG 4

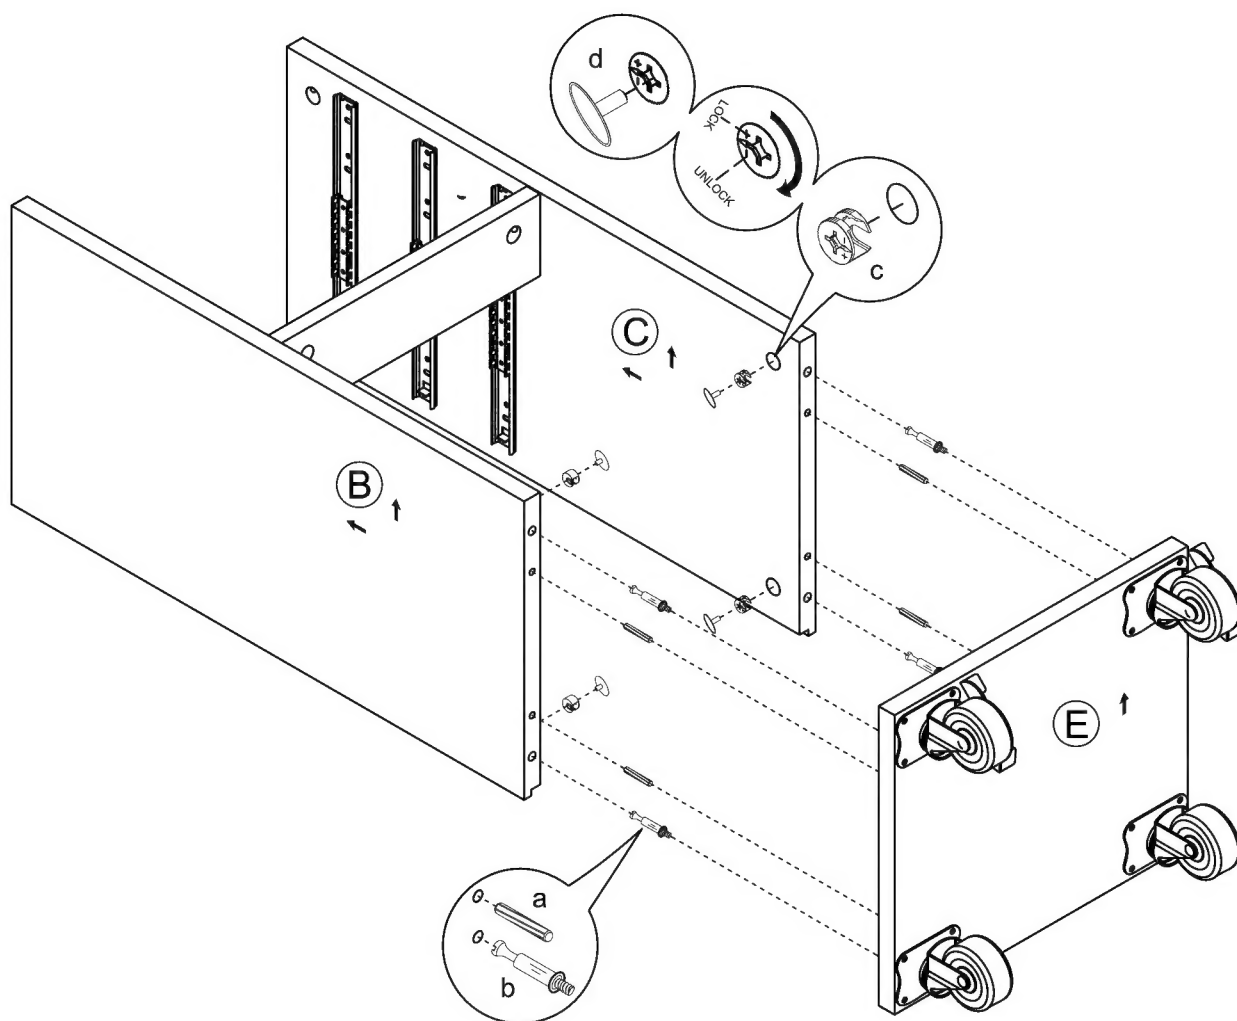


- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE BOTTOM PANEL (E).
- JOIN THE BOTTOM PANEL (E) TO THE ASSEMBLED PART BY USING WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) WITH THE CAM LOCK (c) FROM PRE-DRILLED HOLES.
- COVER THE CAM HOLES WITH LONG PLASTIC COVER (d).

FIG 5

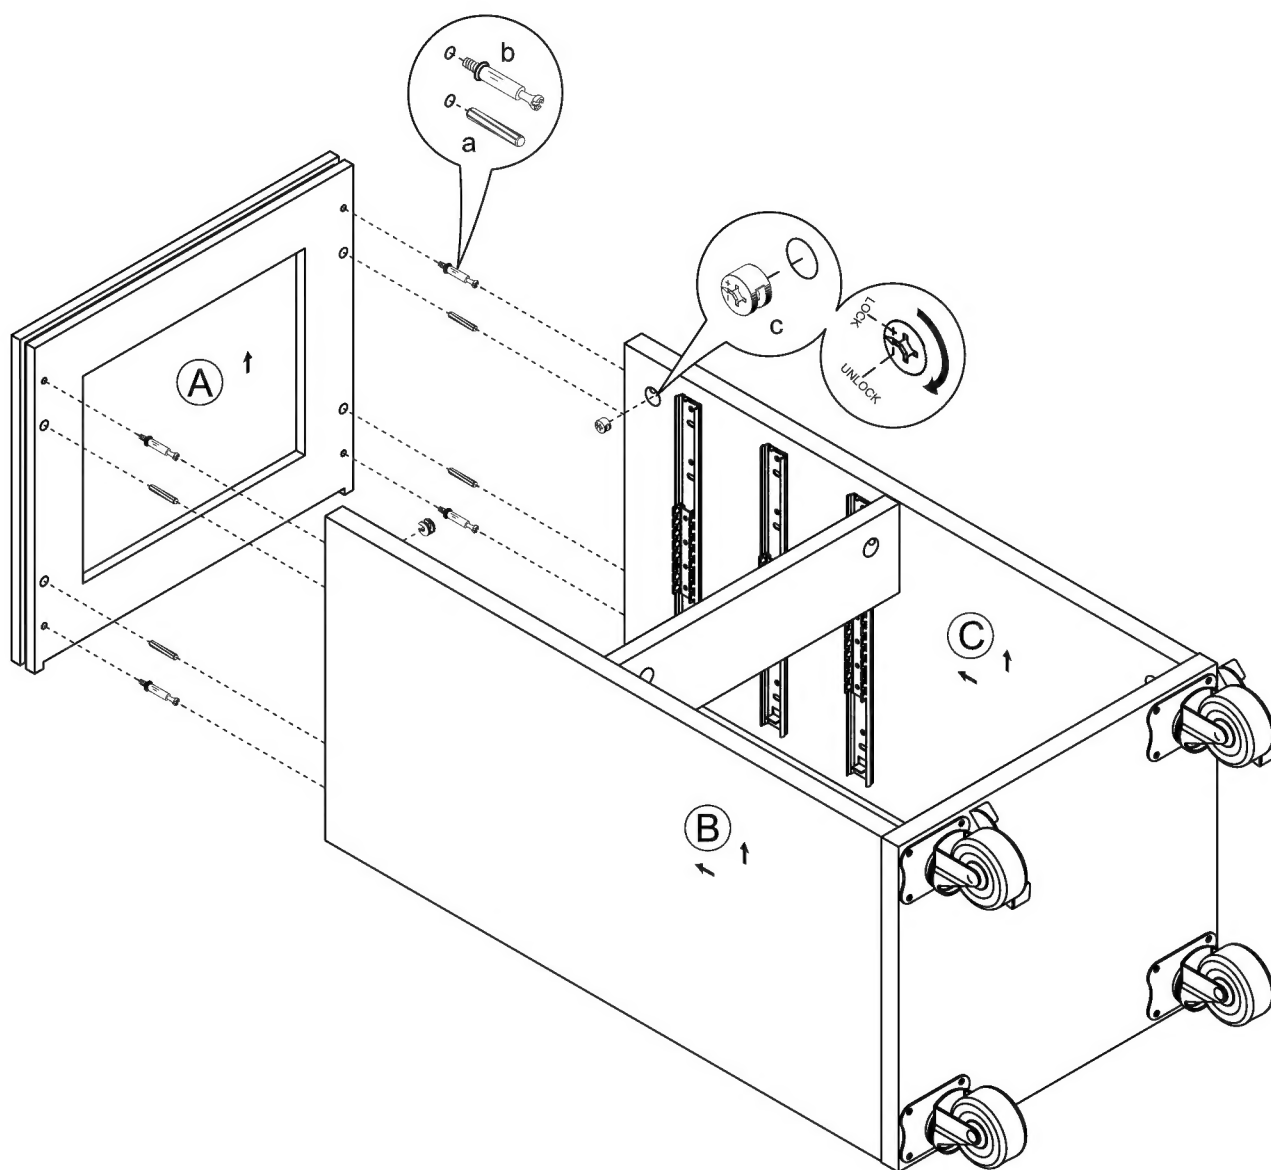


- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE TOP PANEL (A).
- JOIN THE TOP PANEL (A) TO THE ASSEMBLED PART BY USING WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) WITH THE CAM LOCK (c) FROM PRE-DRILLED HOLES.

FIG 6

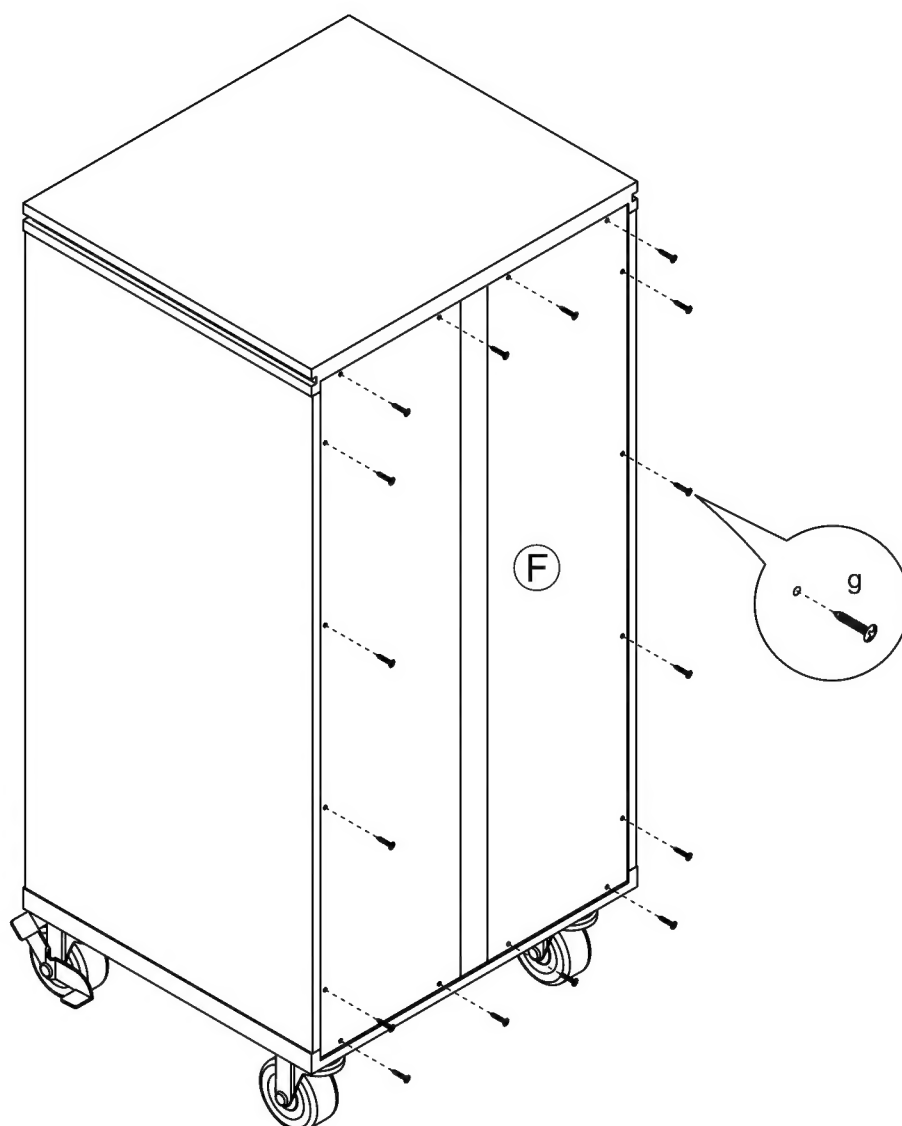

- TIGHTEN THE BACK PANEL (F) TO THE ASSEMBLED PART BY USING THE 5/8" ROUND HEAD SCREW (g).


FIG 7

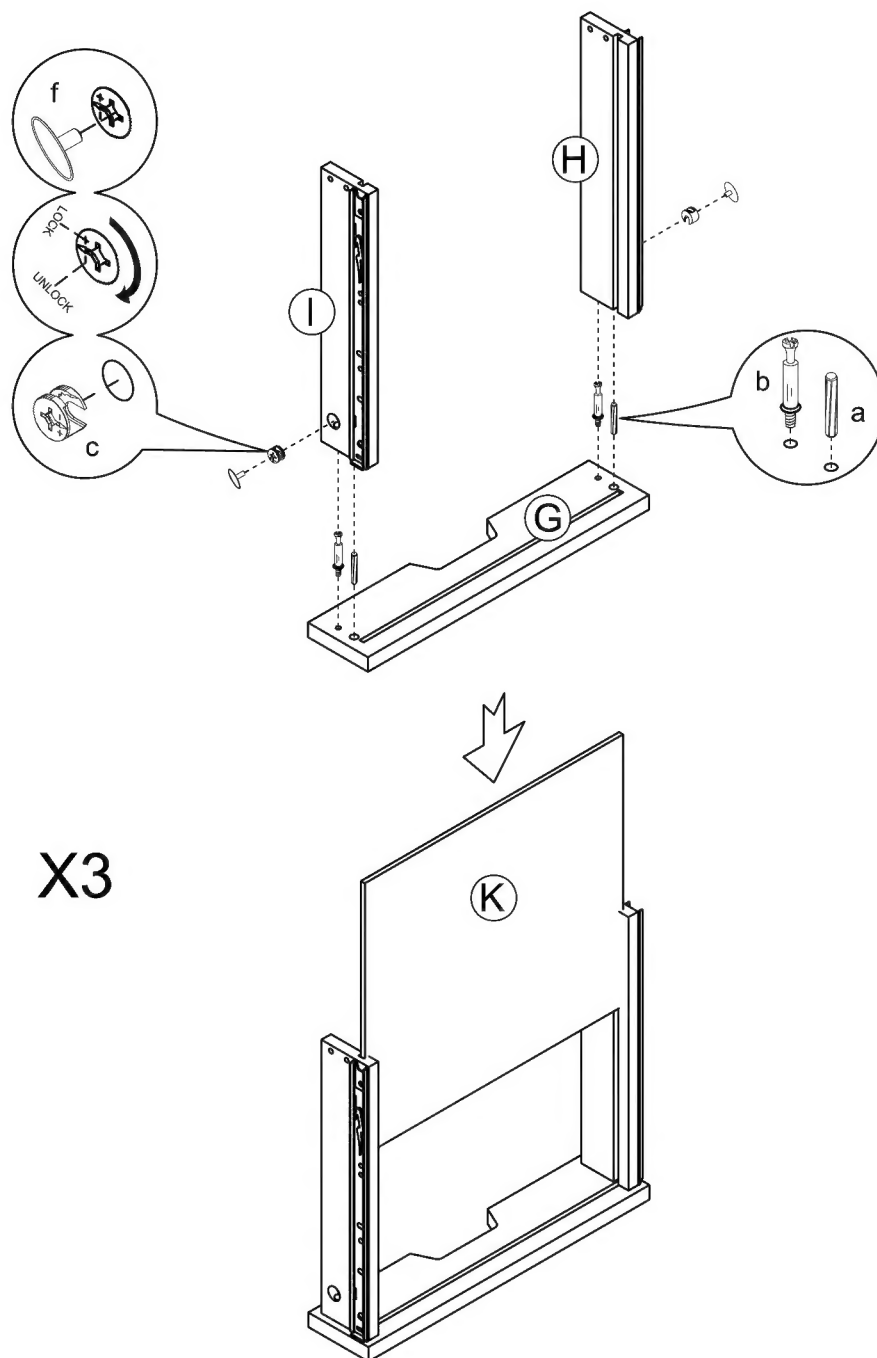

X3


- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE DRAWER FRONT PANEL (G).
- JOIN THE DRAWER LEFT SIDE PANEL (H) AND THE DRAWER RIGHT SIDE PANEL (I) TO THE DRAWER FRONT PANEL (G).
- ONCE JOINED, TIGHTEN CAM LOCK (c) ONTO THE CAM LOCK BOLT (b) USING PRE-DRILLED HOLES.
- COVER CAM HOLES WITH THE SHORT PLASTIC COVER (f).
- SLIDE THE DRAWER BOTTOM PANEL (K) INTO THE GROOVES ON THE DRAWER LEFT SIDE PANEL (H) AND THE DRAWER RIGHT SIDE PANEL (I).

FIG 8

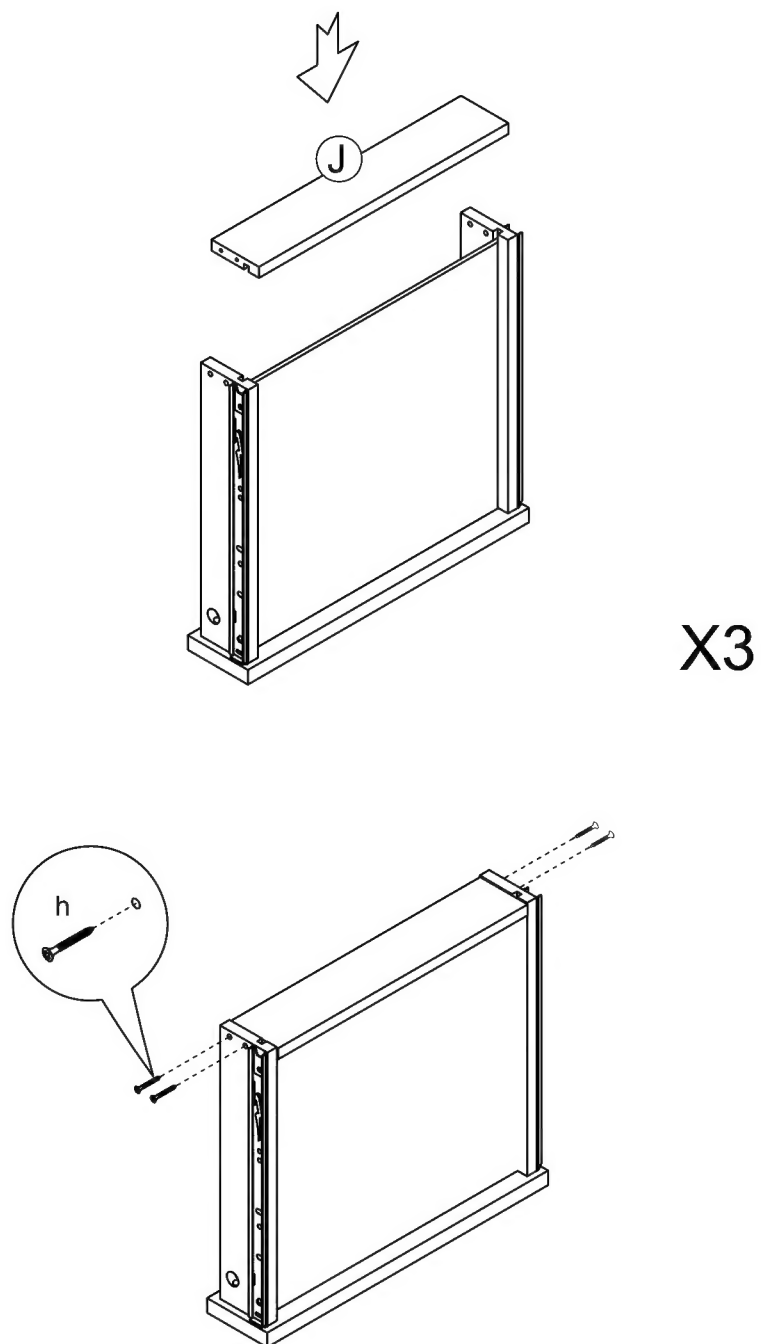

- JOIN THE DRAWER BACK PANEL (J) TO THE ASSEMBLED DRAWER PART AND TIGHTEN THE DRAWER BACK PANEL (J) BY USING THE 1" FLAT HEAD SCREW (h) THROUGH PRE-DRILLED HOLES ON DRAWER SIDE PANELS.

FIG 9

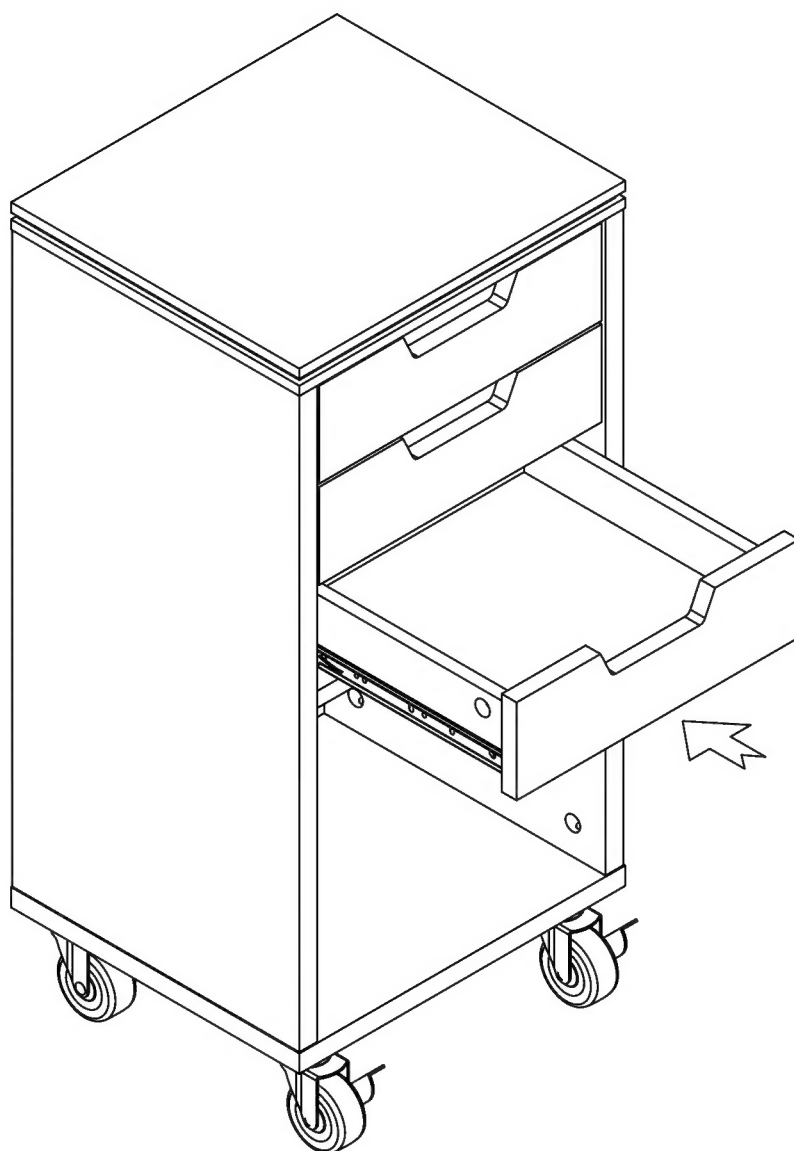

- INSERT DRAWERS INTO THE ASSEMBLED PART.